


IMPORTANT NOTICE
WHEN DIGI-STAR POWER CORD (P/N 148089) IS USED

When the Digi-Star power cord is used (supplied with printer), please be sure to hook up power according to the following notes.

Note 1: The wires must be connected as shown below, or damage could result. **Red (+12 volts)** and **Black (ground)**.

Note 2: If printer does not work when hooked up, check a few items.

- A. Is printer power switch on?
- B. Is correct voltage supplied by the power source
- C. Is fuse in power cord good?

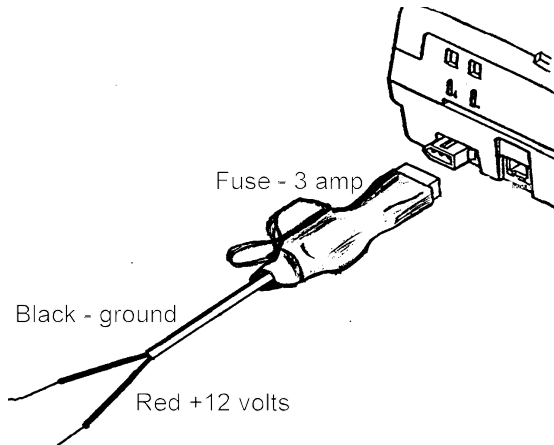

Caution: Replace fuse ONLY with 3 amp fuse, damage to the printer could result.


IMPORTANT NOTICE
WHEN DIGI-STAR POWER CORD (P/N 148089) IS USED

When the Digi-Star power cord is used (supplied with printer), please be sure to hook up power according to the following notes.

Note 1: The wires must be connected as shown below, or damage could result. **Red (+12 volts)** and **Black (ground)**.

Note 2: If printer does not work when hooked up, check a few items.

- A. Is printer power switch on?
- B. Is correct voltage supplied by the power source?
- C. Is fuse in power cord good?

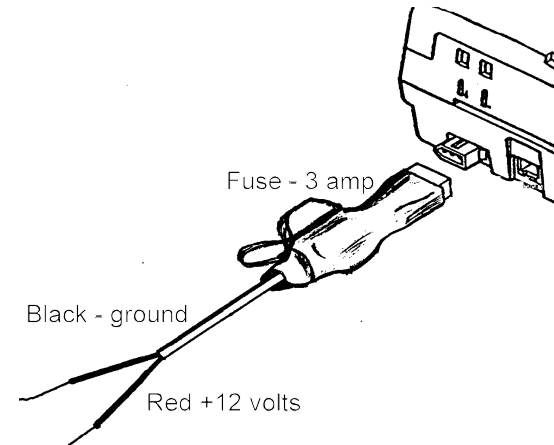

Caution: Replace fuse ONLY with 3 amp fuse, damage to the printer could result.